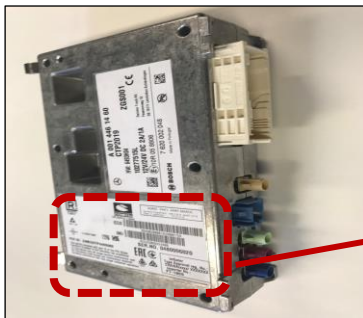# TEST INSTRUCTIONS CTP / CARD READER

FOR ALL VEHICLES

testing process:

1. Find out the telephone number using the ICCID and the phonenumber generator via the FleetBoard portal.

Link „phonenumber generator" : ICCID - Request (fleetboard.com)

2. Switch on ignition

Send test SMS **#TEST#** to the number of the CTP.

(Test answer should be within 2 minutes)

Example: all MB trucks (except Actros 3):

-TEST-#TP online#DTC=00#RDL A#GPS OK#POS OK#262017643900775#11#SW=169.631.906#FIN= W1T96302010XXXXXX#ON#NC#DP#IN#SN072003 8780#D8 OK#DTCO OK#

Example: Actros 3 and third-party vehicles

-TEST-#FMS OK#DTC=00#RDL C#GPS OK#POS OK#262017643900775#11#SW=169.631.906#FIN= WDB93402010XXXXXX#ON#NC#DP#OUT#SN072 0038780#D8 OK#DTCO OK#

3. Evaluate test response:

target state	error condition
TP Online / FMS OK CAN connection detected Attention: With Actros 3 the test is "**FMS OK**"	**TP offline, D8wake / FMS NOK** CAN connection not recognized Attention with Actros 3 and FMS "**FMS NOK**"
RDL A or RDL C Remote download detected via connector "A/C".	**RDL NOK** Remote download via connector "A/C" not recognized
GPS OK#POS OK GPS/GSM connection is available	**GPS NOK / POS NOK** GPS/GSM connection is not available
SW=169.631.906# = SW from the Vehicle computer "CTP"	
FIN= XXXXXXXXXXX123456 correct chassis number must be present	**wrong or no chassis number in the test**
ON = Ignition is on	**OFF** = Ignition is off
SN0230018199# = Serial number from the vehicle computer "CTP"	
D8 OK Driver detection signal is available	**D8 NOK** Driver detection signal is not available
DTCO OK Digital tachograph is recognized	**DTCO NOK, no TCO** Digital tachograph is not recognized

If the test does not correspond to the target state,
workshop support can be contacted for assistance.

Contact information for Fleetboard workshop support

reachability:

Monday to Friday: 09:00 to 17:00

Saturday 8:00 a.m. to 1:00 p.m

Telephone: +49 (0) 7271 98 18 18